

**TOP PANEL:** Black chassis. 5 switched AUDIO UNITS AC outlets (with indicator light). 2 switched VIDEO UNITS AC outlets (with indicator light). ★ 4 switched POWER AMPLIFIERS AC outlets: MAIN, 2, 3, and 4 (with individual indicator lights). 3 UNSWITCHED AC outlets (with indicator light).



**END PANEL:** AC power cord. **POWER CONTROL**: input.

Used only with the **CR 10** Remote Control System. The **PC 1** has 14 AC Outlets that are controlled by the **CR 10**. Four outlets are for individual area power amplifiers, and turn on only when the specific area is turned on. Five switched outlets are for accessory audio equipment and turn on whenever the **CR 10** receives a PROGRAM command. Two switched outlets are for Video accessory equipment and turn on whenever VIDEO is selected for any area. Three unswitched outlets remain on as long as the main **PC 1** power cord is connected to a live AC wall outlet. Built-in McIntosh Surge Protectors and RFI filtering protect any equipment connected to the **PC 1**.

PC 1 - Sold from 1994 - 2000. S/N: GX1001~GX????

*Size:* 5-1/4"H, 11"W and 3-1/2"D. *Weight:* ? pounds. *\$440.00*